TANOVA

Step by Step Installation Instructions

For **Tanova FLEX Models**

For further assistance in New Zealand
www.tanova.co.nz or **www.fit-nz.co.nz**
or contact Fit **09 431 0025**

DORSET AUSTRALIA

FOR FURTHER ASSISTANCE
IN VICT, SA & TAS,
CONTACT DORSET
1300 121 800

Furnware Group

FOR FURTHER ASSISTANCE
IN NSW, QLD, NT, ACT AND WA,
CONTACT FURNWARE GROUP
1300 222 600

tanova.co.nz

Use in conjunction with full size template supplied with your unit

TANOVA

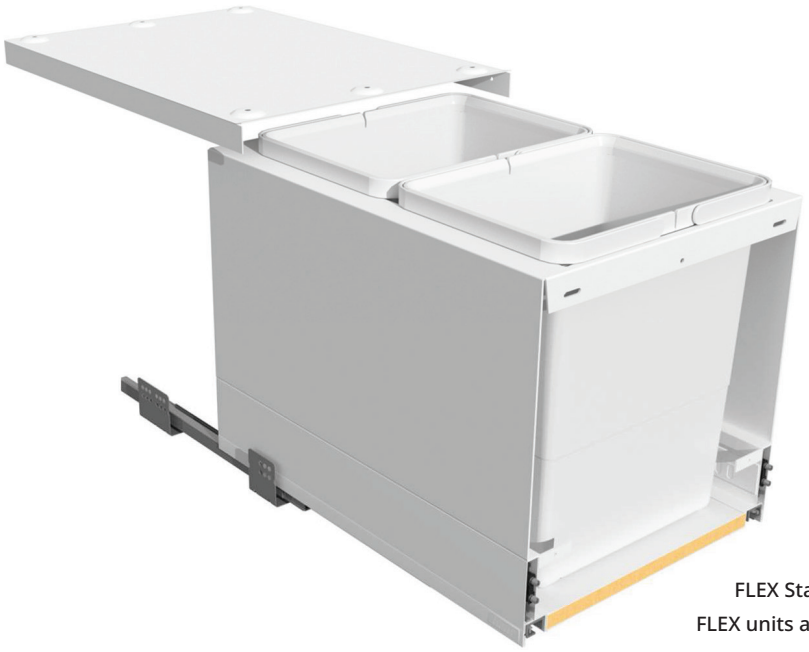

Illustration shows Tanova
FLEX Standard unit on ALUNAN T drawer.
FLEX units are supplied to sit on your drawer.

The TANOVA FLEX system is designed to fit on most 88-105mm high slim wall 500mm soft close drawer systems.

FLEX Standard Unit consists of a metal frame, pair of waste buckets and top cover panel.

FLEX Base Unit consists of a metal frame and pair of waste buckets.

The Height dimensions referenced below specify the space required from the top of the drawer side to the underside of the cabinet this varies, depending on the bucket combination.

Bucket Combo	2 x 12L Buckets	2 x 15L Buckets	2 x 18L Buckets	2 x 20L Buckets	2 x 24L Buckets
FLEX Standard Height	298mm	236mm	298mm	280mm	394mm
FLEX Base Height	293mm	231mm	293mm	275mm	389mm

1. Fit off drawer system in cabinet ensuring sufficient space between top of drawer side and underside of cabinet.
2. If your unit includes top cover panel, fix off top cover against the underside of cabinet top and flush with the front.
3. Adjust drawer front clearances.
4. Place metal frame onto drawer sides and fix off to front of back panel (2 x Tabs) and rear of drawer front, (2 x bottom tabs and 1-3 screws at the top of frame) with pan head screws provided.
5. Fit buckets into frame.