TANOVA

Step by Step Installation Guide

For all **Simplex Models, Handle and Drawer Types**

For further assistance in New Zealand
www.tanova.co.nz or **www.fit-nz.co.nz**
or contact Fit **09 431 0025**

DORSET AUSTRALIA

FOR FURTHER ASSISTANCE
IN VICT, SA & TAS,
CONTACT DORSET
1300 121 800

Furnware Group

FOR FURTHER ASSISTANCE
IN NSW, QLD, NT, ACT AND WA,
CONTACT FURNWARE GROUP
1300 222 600

tanova.co.nz

Use in conjunction with full size template supplied with your unit

TANOVA

Installation guide

- If your cabinet is made to suit the minimum internal sizes the bin frame will fit snugly in the cabinet and allow easy installation. These dimensions can be found on our website on each product's Download Brochure link.
- If your cabinet width is greater than the minimum internal width and you are mounting a drawer front then you need to centralise the bin frame in the cabinet and fix frame through top holes only.
- If you're fitting a handle type, you need to fix to the opposite side of the cabinet to the door hinges or a minimum of 25mm from hinged side of cabinet.

NOTE: Please refer to Tanova Waste Solutions catalogue for internal dimensions.

STEP 1

With your cabinet upside down (**fig.1**) position the bin frame as shown with a minimum clearance of 2mm back from cabinet front (**fig.2**).

Fig. 1

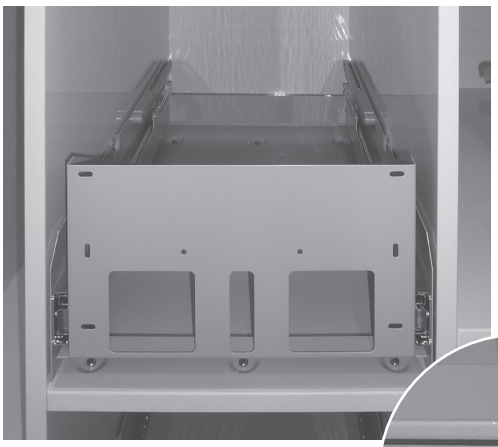

Fig. 2
IMPORTANT: Minimum clearance of 2mm from the front of the cabinet.

NOTE: If the system is a Push to Open unit, 5mm of clearance must be maintained between back of drawer front and cabinet (including bump stops if fitted). Bringing assembly flush with the front of the cabinet will achieve this.

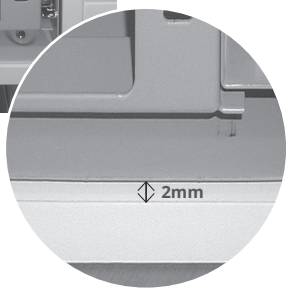

TANOVA

Installation guide

STEP 2

Ideally you will fasten the bin frame through the top and side dimples to provide excellent stability. To get access to all the dimples you may need to extend the bin carriage as shown (**fig.3** and **fig.4**).

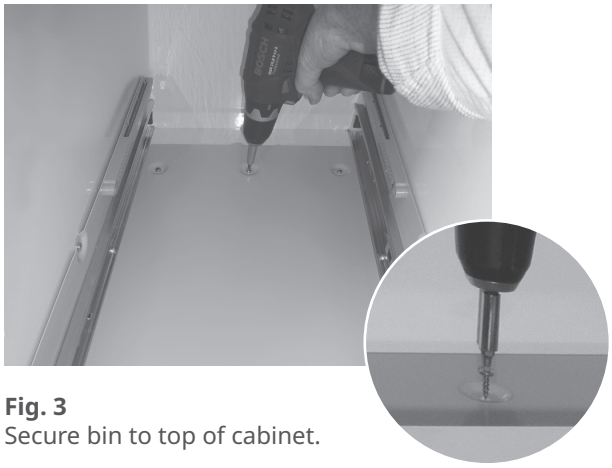

Fig. 3
Secure bin to top of cabinet.

Fig. 4
Secure bin frame to cabinet sides through runner and dimples.

STEP 3

If you're installing a handle type just fit the buckets into the bin carriage and you are done.

STEP 4

If you have a set of marking jigs go to step 5. If not measure off the fixing points and mark on back of door then go to step 6.

STEP 5

To mount your drawer front with marking jigs, insert the jigs as shown below and position your front panel then give the front a bump with your hand to mark the screw positions on the reverse side of the door (**fig.5**).

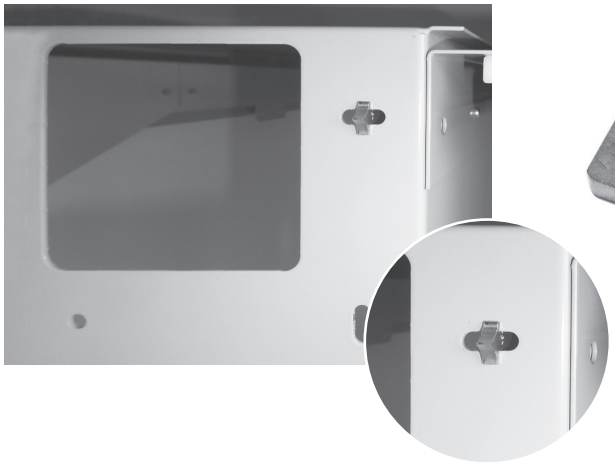

Fig. 5
Insert marking jig into top two slots and turn 90˚ to lock in place.

TANOVA

Installation guide

STEP 6 Now pre drill a 2-3mm hole in the centre of your marks and fit drawer front to bracket, tighten gently.

STEP 7 Close bin drawer and check alignment, adjust and insert remaining 4 screws.

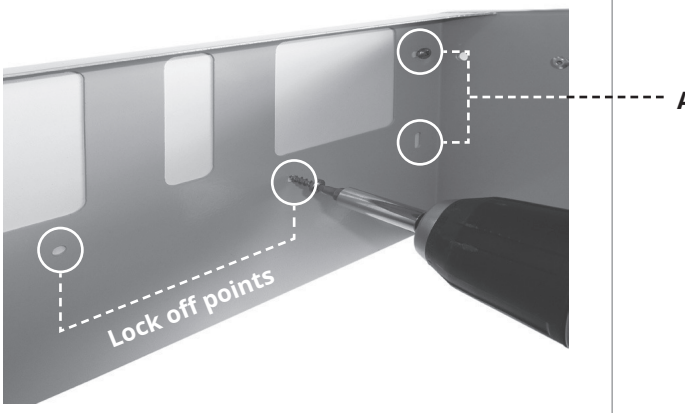

Fig. 6

STEP 8 Check alignment again and adjust.

STEP 9 Now fasten the two remaining screws into lock off points to prevent drawer front movement.

STEP 10 Insert bins and you're ready to go.

STEP 11 Bags can be fitted (optional), just raise handles and place bag liner in bin and around the rim, now lower handles to hold bag open and firmly in place.